
VOODOO° SPEAKER

OWNER'S GUIDE

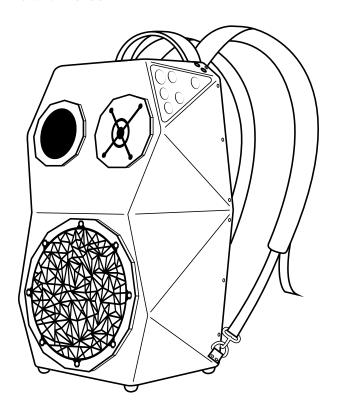



CONTENTS

• INTRODUCTION 4
• WHAT'S IN THE BOX 5
• SET UP 6
SET UP SYSTEM
CHARGING THE VOODOO® 7
TURN ON AND OFF THE SPEAKER 8
SYSTEM USE
CONTROL BUTTONS 9
LED INDICATOR LIGHTS 10
• CONNECTING A DEVICE TO THE AUX-IN CONNECTOR
• CONNECTING A DEVICE TO THE BLUETOOTH
CONTROL MULTIPLE DEVICES
BLUETOOTH & MINI-JACK CONNECTION14
TRUE WIRELESS STEREO USE 15
MINI-JACK & MINI-JACK CONNECTION···················16
• BATTERY POWER
• ACCESSORIES
• OPTIONS
• IMPORTANT SAFETY INFORMATION
• INFORMATION TO NOTE AND CONSERVE
• OPERATION
• TRANSPORT ADVICE
MAINTENANCE AND CARE
PROBLEM SOLVING26
CLEANING28
LIMITED WARRANTY29
CUSTOMER SERVICE 31

INTRODUCTION

ABOUT THE VOODOO® SPEAKER

The YOODOO® voodoo speaker is a powerful boombox made in france. it connects wirelessly and / or mini-jack to your smartphone, tablet or other bluetooth device and / or mini-jack output so you can enjoy your music, videos and games anytime and everywhere.

SYSTEM FEATURES

- You can charge your phone from a USB port directly to your speaker.
- The lithium-ion battery allows you to listen to music for hours. The battery is rechargeable.
- The charger has to be plug directly into the speaker.
- You can connect an audio device thanks to the AUX-IN.
- You can connect one ore more VOODOO® to each other thanks to the AUX-OUT .
- You can bring the VOODOO® everywhere thanks to the backpack function.


"HANDMADE PRODUCT"

The material used and the manufacturing process of the VOODOO® speaker give a unique aesthetic to the speaker. the exclusivity of the product does not alter its performance.

A team is working full time on the manufacture of your product to offer you a quality speaker "handmade in the alps".

WHAT'S IN THE BOX

Unpack carefully the elements and check if all these components are present:

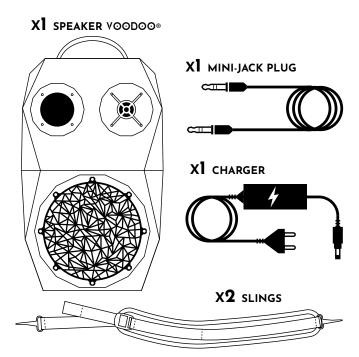




If any components look damaged, do not try to use it. Please contact immediately PEOPEO's customer service: **sav@peopeo.io**.

SET UP

THE SLINGS

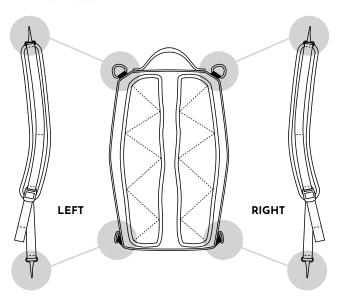

To set up the slings on your speaker:


- 1. Differentiate the left shoulder sling and the right sling inside the box.
- 2. Attach the hooks on the top of the sling with the hooks on the top of the speaker and attach the lower hooks of the sling to the hooks on the bottom of the speaker.
- **3.** Adjust your slings according to your needs. slide the loop on the slings to shorten or lengthen the band and find the perfect length.

SET UP SYSTEM

CHARGING THE VOODOO®

Before using your speaker for the first time, connect it to the power outlet and charge the battery.

- 1. Connect the power cord to the charger connector of the VOODOO® speaker.
- **2.** Connect the other end of the power cord to the AC power cord.
- 3. Connect the power cord to a powered electrical outlet.

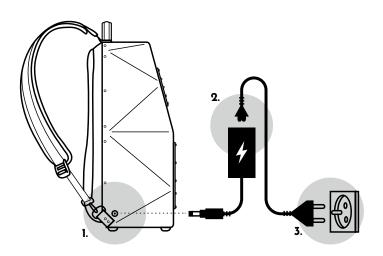




✓⇒ COMMENT:

Use the right adapter for your country.
The battery indicator is orange when it is charging.
The indicator turns green when the speaker is charged.
The charging time is about two and half hours.

SET UP SYSTEM

TURN ON AND OFF THE SPEAKER

Press the button $\red{0}$ on the interface to turn on your speaker. A green light comes on.

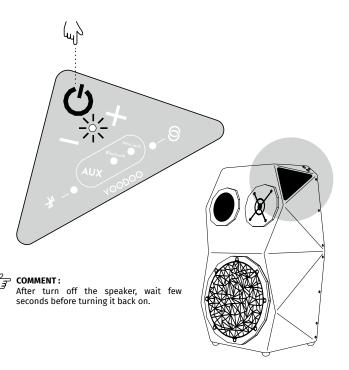


SYSTEM USE

CONTROL BUTTONS

You can with the control buttons:

- 1. Turn your speaker on or off.
- 2. Control the volume of your speaker.
- ${f 3.}$ Select the audio source: Bluetooth connection, mini-jack connection or both.
- 4. Disconnect any connected device by Bluetooth and connect a new one.
- 5. Pair two VOODOO®

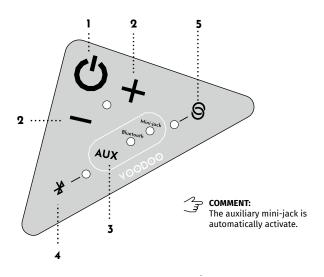

SYSTEM USE

LED INDICATOR LIGHTS


VI. Function indicator light. The indicator is illuminated when the speaker in on. The indicator is off when the speaker is no longer on. The indicator is flashing red when the maximum sound power is reached.

V2. Bluetooth indicator light.

V3. Indicator of the Bluetooth source selected via AUX.


V4. Indicator of mini-jack connection selected.

V5. True Wireless Stereo indicator light.

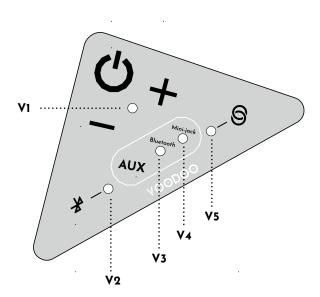

CONNECTING A DEVICE TO THE **AUX-IN CONNECTOR**

MINI-JACK CABLE USE

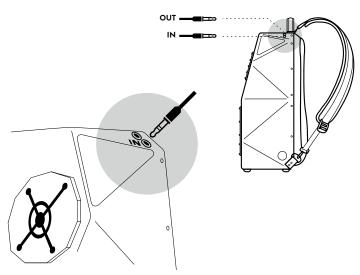

With the IN input you can connect your speaker to:

- A smartphone, tablet, computer, or any other type of audio player.
- A musical instrument (for example: a guitar)
- A mixing deck.

The INput jack accepts a 3.5mm stereo mini jack (included).

COMMENT: a 6.3 mm jack cable can be connected provided you have an adapter (not supplied).

10


11

CONNECTING A DEVICE TO THE AUX-IN CONNECTOR

MINI-JACK CABLE USE

- 1. Turn on your speaker.
- 2. The led AUX indicator is automatically lit.
- 3. Using a 3.5mm stereo cable, connect your device to the AUX -IN connector on the speaker.
- 4. Press play on your audio player.
- 5. Press the button + to activate the sound on your speaker.


ADVICE: For an optimal sound increase the volume of your connected device (the maximum is recommended). Then, use the control buttons on your speaker.

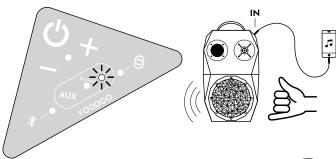




BE CAREFUL:

Never connect at the same time your mini-jack cable on the plug **IN** and **OUT**. You risk to damage the system.

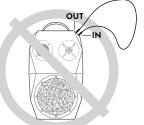

CONNECTING A DEVICE TO THE BLUETOOTH

PAIRING A MOBILE DEVICE

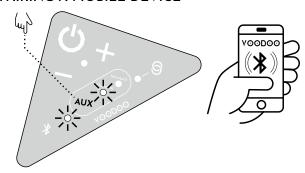

With the Bluetooth system you can connect wirelessly your speaker to any any mobile device that has a Bluetooth function.

- **1.** Turn on your speaker.
- 2. Press the button AUX until the Led Bluetooth indicator is lighting up. The Bluetooth indicator V2 is flicking, searching for the device.

Pairing a mobile device :

- 1. Turn on the Bluetooth feature in the Settings of your mobile device.
- 2. Select PEOPEOxxx in your devices list.
- 3. The Bluetooth indicator **V2** stops flicking when your mobile device is connected to your speaker.
- 4. Play your music. Press the button + to activate the sound on your speaker. Remember to adjust the volume on your mobile device and on your speaker with the + and buttons.



BE CAREFUL:

It is recommended to place your mobile and your speaker $\mbox{\it within 10 meters}$ of each other.


Over 15 meters, the speaker will no longer receive the signal.

CONTROL MULTIPLE DEVICES

BLUETOOTH & MINI-JACK CONNECTION

It is possible to connect a device with a mini-jack cable and at the same time connect a mobile device with a Bluetooth connection.

- I. Connect your mobile device with a mini-jack cable (see page 12). The led mini-jack indicator V4 is lighting up. Press the button + to activate the sound on your speaker. Adjust the volume with the control buttons.
- 2. Connect your second device to Bluetooth (see page 13). Your connected mini-jack source will stop during the time you will adjust your Bluetooth source. Press the button + to turn on the sound on your speaker. Adjust the volume.
- **3.** Press the button **AUX**, to light the led mini-jack indicator V4 and the led bluetooth indicator **V3**. Then press the button **+**. Both devices will be ready to be heard.
- 4. If you press the buttons + and -, the volume of each source will increase or decrease from the presets you have made.

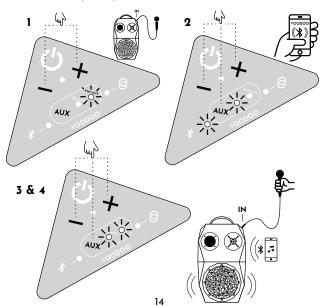


CONTROL MULTIPLE DEVICES

TRUE WIRELESS STEREO USE

It is possible to create a stereo hi-fi system by connecting two VOODOO® speakers together.

- 1. Turn on your speakers.
- 2. Press the button AUX and choose the Bluetooth function on each speaker.
- **3.** Choose your "slave" speaker. This speaker is the device which is not connected to the sound source.
- 4. On the « slave » speaker, Hold your finger on the button for more than three (3) seconds on the True Wireless Stereo button (5) . The Led **V5** indicator will flick slowly.
- 5. The second speaker is the « master ». Briefly press the True Wireless Strereo button. The led indicator flashes rapidly. Connect your device to Bluetooth.
- 6. The True Wireless Stereo is working when led indicators stop to flick.
- 7. Press the button + to activate the sound on your speaker.

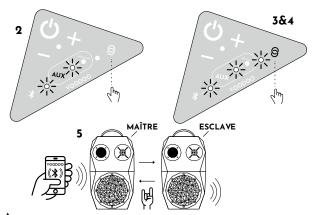




This feature only works if the external source is connected in Bluetooth. The volume of each speaker is dissociated and must be set separately. To disconnect all your Bluetooth connected devices, press the Bluetooth button (see page 9).

CONTROL MULTIPLE DEVICES

MINI-JACK & MINI-JACK CONNECTION


You can connect your mobile device to multiple speakers.

- Using a 3.5mm mini-jack cable, connect your device to the AUX-IN connector on the speaker.
- 2. Then connect a 3.5mm mini jack cable to the AUX OUT connector on your speaker and to the AUX IN connector on the second VOODOO® speaker.
- 3. Adjusting the volume of the speaker connected to the source will affect the volume of the second speaker. However the second speaker can be adjusted again by increasing or decreasing the volume directly with its control buttons.

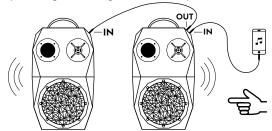

ADVICE:

 If you want even more power, you can repeat it with as many VOODOO® speakers as you want.





You can do it the same thing by connecting your mobile device in Bluetooth.

BATTERY POWER

BATTERY LIFE

When the battery is charged you can use your speaker for 15 hours in a normal use.

The battery discharge time varies depending on the features used (USB charger, Bluetooth connection, True Wireless Stereo connection ...)



✓ COMMENT:

Your speaker will be fully charged after 2h30. To increase the battery life, reduce the sound volume.

LIFE CYCLE

After 500 cycles of use, the battery life will have decreased by 10%. The battery life will be 13h instead of 15h initially.

REPLACING THE BATTERY




BE CAREFUL:

The user can not repair or replace the battery supplied with the system. It is necessary to contact PEOPEO customer service for any problem related to the battery.

CHARGING YOUR MOBILE DEVICES

You can charge different types of mobiles devices such as a mobile phone, tablet or electronic cigarette thank to the USB plub on the side of your speaker.

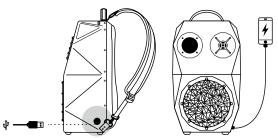

17

16

ACCESSORIES

RAIN COVER

The **YOODOO**® was made for an outdoor and indoor use. It has made to resist to a « normal » climate and environment.

The cover rain protects your speaker from an adverse weather such as heavy rain.

Easy to put on, you have to place it on the front of the VOODOO® speaker.

ADVICE:

It is better to protect and put it away in a a well-ventilated area away from high temperatures, dust and moisture.



COMMENT:

To prevent to prevent any malfunction, the **YOODOO®** must be protected from a bad weather. When the **YOODOO®** speaker is not used, it is better to put it away in a clean and dry place



OPTIONS


SIDE POCKETS



BE CAREFUL:

The side pocks have to be ad when the speaker is manufactured. It is impossible to ad this option when the speaker is delivered, except if you send it back to PEOPEO company.

For any request, please contact PEOPEO Customer Service sav@peopeo.io

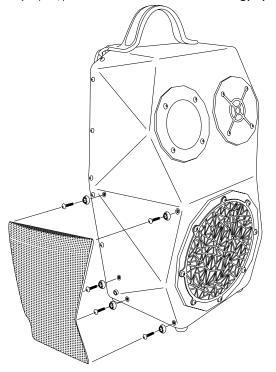

18

OPTIONS


SIDE POCKETS

To set up your pockets:

Step 1: Unscrew the screws on the left and right sides of your speaker: 10 screws to remove.

Step 2: Take these screws and add the male part of the clips. Retighten it at the same place.

Step 3: Clip your pockets on the side.

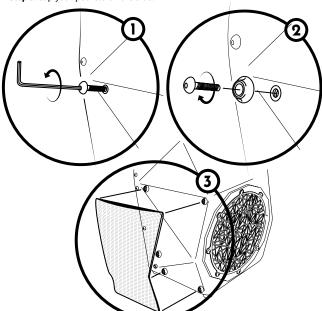



If one of the component looks damaged, do not try to use it. Contact immediately PEOPEO Customer Service.

IMPORTANT SAFETY INFORMATION

Read these informations carefully and keep it for future reference.



WARNINGS:

- The aesthetic of the speaker is unique: resulting from specific technology and manufacturing techniques.
- This product is weatherproof but not waterproof!
- · Never put the speaker into water.
- To reduce the risk of malfunction, never expose without protection, your speaker to the rain for too long.
- Do not spill any liquid on the speaker.
- Do not leave the speaker outside without protection for several days.
- · Do not clean the unit with water.
- Never place flaming objects, such as lighted candles, on the device.
- Do not use another battery charger than the one supplied with your speaker.
- Do not connect the same mini-jack cable to the AUX-IN and AUX-OUT jack at the same time.
- The speaker should be stored and kept out of the reach of babies and children under 6 years of age.
- The speaker should not be used at a high volume level in the presence of small children.
- Do not keep in charge the battery of your speaker for long periods without
- After long periods without use, the speaker may be discharged.
- The battery life is better when the speaker is used in a place at a normal temperature (between 5 ° C and 20 ° C).
- The user can not repair or replace any component of the speaker. You have to contact PEOPEO customer service for any problem.
- · Do not open the speaker.

IMPORTANT SAFETY INFORMATION



BE CAREFUL: any unauthorized modification may compromise your safety, respect of regulations and the speaker's functionin, and invalidate the warrantv.



WARNING: this product contains magnetic components. Contact your doctor for any questions regarding the effect of these components on an implanted medical device.

- 1. Read these instructions carefully.
- 2. Keep these instructions.
- 3. Respect all warnings.
- 4. Follow all instructions.
- 5. Use only a dry dust-cloth for cleaning.
- 6. Never block the air vents.
- 7. Follow the manufacturer's instructions for installation.
- 8. Do not install this product close to any heat source.
- 9. Use only accessories specified by the manufacturer.
- 10. Unplug the speaker during thunder, storms or any long unused periods.
- 11. Contact PEOPEO to any repairs. A repair is necessary when the unit has been damaged in any way.

Any modification not expressly authorized by PEOPEO may void the user's right to use this device.



Treatment of electrical and electronic appliances at home.



PEOPEO declares this product meets the criteria and other applicable provisions of the European Directives. It meets UL 94 V flammability requirements.

Lithium-Ion battery used, meets Safety IEC 62133 (2012) and UN 38.3 standards.

INFORMATION TO NOTE AND **CONSERVE**

The name of the model and the serial number are written below the speaker.

Serial number:
Model: VOODOO® speaker
Purchase date:
We advise to keen your receipt with this guide

Phone number (France): +33(0)7 67 20 22 79

OPERATION

Place the speaker only on its base. Standing the speaker on any other side can cause damage to the speaker and adversely affect sound quality.



BE CAREFUL:


It is imperative not to put the speaker on a wobbly and/or fragile base because of the size of the **YOODOO**®.


ADVICE:

 
The sound quality is even better when the VOODOO® is on the ground.

To avoid wireless interference:

- Keep other wireless equipment away from the speaker.
- Do not place the speaker and your mobile device on a metal shelf and away from any audio/video equipment and direct heat source.

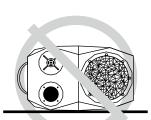

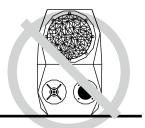



TRANSPORT ADVICE



INSIDE THE PLANE

You have to respect some rules when you transport the VOODOO@ speaker.

- Unintentional activation of the speaker must be made impossible in your lugage. Make sure your speaker is completely discharged.
- Electronic mobile devices between 100 WH and 160 WH can be transported in the cabin and in the hold with the prior airline's approval.



✓! BE CAREFUL:

Each airline has specificities. It is important to contact before your trip, your airline or your tour operator to know all the regulations.

OTHER MEANS OF TRANSPORT



BE CAREFUL:

The speaker may be carried on your back provided that you do not endanger your safety and health.

It is strongly not recommanded to carry your speaker on the back while traveling by motorbike, scooter or ski/snowboard.

PEOPEO is in no way responsible for any injury related to the transport of the **YOODOO®** speaker.

MAINTENANCE AND CARE

PROBLEM SOLVING

PROBLEMS	SOLUTIONS
No power	Secure the power cord at both ends. Connect the power cord to a power electrical outlet. Use the AC adapter supplied with your speaker.
No power (battery).	It is possible your battery is uncharged. Connect the power cord to a power electrical outlet.
The speaker is not connected to the mobile device.	On your mobile device: - Disable and enable the Bluetooth function Delete the speaker from your device list. Pair it again. Put the mobile device closer to the speaker and away from sources of interference or obstructions. Pair it to another mobile device.
No sound on your mobile device.	Turn on the speaker. Increase the volume of your speaker, your mobile device and the music source. Press AUX and make sure you use the right mobile device. Put the mobile device closer to the speaker and away from sources of interference or obstructions. Try with another mobile device. Pair your speaker with another mobile device. On your mobile device: Disable and enable the Bluetooth function. Make sure your mobile device is compatible.

MAINTENANCE AND CARE

PROBLEM SOLVING

Bad sound quality from your mobile device.	Try with another music source. Pair it to another mobile device. Disable the second mobile device. Put the mobile device closer to the speaker and away from sources of interference or obstructions.
No sound on the auxiliary device.	Turn on the auxiliary device and start to play. Connect the 3.5mm cable correctly to the AUX connector on the speaker and the auxiliary device. Increase the volume on the speaker and on the auxiliary device. Use another AUX cable. Connect another auxiliary device.
Inhabitual noise.	Try with another music source. Pair it with another mobile device. Disable the second mobile device. Put the mobile device closer to the speaker and away from sources of interference or obstructions. Check that the screws on the speaker are properly tightened.
Red led indicator lits	• Turn off the speaker, wait 5 secondes and turn back on.

MAINTENANCE AND CARE



CLEANING

- \bullet You can clean the surface of the system with a soft, clean and dry dust-cloth.
- Do not use aerosols near the system. Do not use solvents, chemicals, or cleaning fluids containing alcohol, ammonia, or abrasives substances.
- · Make sure that no liquid enters the gaps.
- Do not try to disassemble parts of the speaker in order to clean them or for any other reason.
- For the maintenance of the slings, they must be unhooked from the speaker. Then clean them with cold water by using a clean sponge.

LIMITED WARRANTY

Your system is guaranteed by a limited warranty.

Content of the commercial warranty:

PEOPEO guarantees your product free of charge against any failure, any defect (including defects in material and workmanship) and any malfunction of your product.

This warranty applies only to the original purchaser or the person receiving the product as a gift and may not be extended to any other subsequent beneficiary.

If any breakdown, defect or malfunction appearing on your product during the period of the guarantee, PEOPEO engages automatically and without any expenses for the customer to (at the choice of PEOPEO): 1 / to repair the product 2 / to replace the product 3 / refund the purchase price of the product in exchange for the return of product.

Time of the commercial warranty:

The speaker's warranty is valid only for a period of two (2) years from the date of the delivery.

Terms and deadlines for implementing the commercial guarantee: The customer must to contact PEOPEO customer service by email sav@ peopeo.io or by phone +33(0)7 67 20 22 79.

Before providing a warranty service, PEOPEO may request to provide proof of purchase including a receipt or invoice. The commercial warranty will not apply if the serial number has been removed from the product.

Warranty disclaimer:

PEOPEO's commercial warranty does not cover damage to the product that results from normal wear and tear of the product, operating fault, improper use of the product, improper maintenance of the product, or damage to the product, accidental breakage, no respect of these instructions in this document.

Any unauthorized intervention on the product by the customer, disassembly, modification, personalization or a repair performed by anyone other than PEOPEO void the commercial warranty.

LIMITED WARRANTY

Legal warranty rights:

You have the following legal rights:

Article R. 211-4 of the French Consumer Code:

In contracts concluded between professionals on the one hand and non-professionals or consumers on the other, the professional can not contractually guarantee the goods to be delivered or the service to be rendered without clearly mentioning that in any event, the legal warranty that obliges the professional seller to guarantee the buyer against all consequences of defects or latent defects of the thing sold or service rendered.

Article L. 217-4 of the French Consumer Code:

The seller delivers a property in accordance with the contract and answers for the lack of conformity existing during the delivery. It also responds to any lack of conformity resulting from the packaging, the assembly instructions or the installation when it was charged to it by the contract or was carried out under its responsibility.

Article L. 217-5 of the French Consumer Code:

The property is in accordance with the contract:

- 1° If it is fit for the customary use of a similar good and, where applicable:
- if it corresponds to the description given by the seller and possesses the qualities that he has presented to the buyer in the form of a sample or a model:
- it has the qualities that a buyer can legitimately expect given the public statements made by the seller, the producer or his representative, including advertising or labeling;
- 2 ° Or if it has the characteristics defined by mutual agreement by the parties or is suitable for any special use by the buyer, made known to the seller and that the latter has accepted.

LIMITED WARRANTY

Article L. 217-12 of the French Consumer Code:

The action resulting from the lack of conformity is prescribed by two years from the delivery of the property.

Article 1641 of the French Civil Code:

The seller is bound by the guarantee by reason of the hidden defects of the product sold which render it unsuitable for the use for which it is intended, or which diminish the use so much that the buyer would not have acquired it, or would have given a lower price, if he had known them.

Article 1648 §1 of the French Civil Code:


The action resulting from latent defects must be brought by the purchaser within two years from the discovery of the defect.

CUSTOMER SERVICE

For any further question, please contact PEOPEO customer service:

- by e-mail sav@peopeo.io
- by phone +33(0)7 67 20 22 79

You can also go one our website www.peopeo.io and visit our Support page.

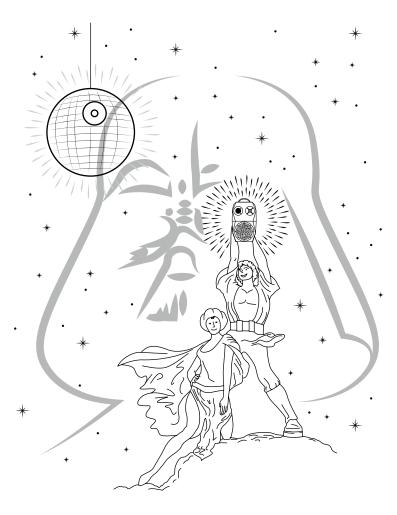

MAKE EACH PLACE A PARTY.